

# VOXWEE

## Y836 Mandolin



# Table of Contents

Safety Tips .....	1
Introduction .....	1
Pack Contents .....	1
Operation .....	1
Set-up .....	1
Inserting the Blades .....	2
Adjusting the Thickness .....	2
Slicing .....	3
Removing the Blades .....	3
Cleaning, Care & Maintenance .....	4
Troubleshooting .....	4
Spare Parts .....	4
Compliance .....	4

# Safety Tips



**THE MANDOLIN IS A POTENTIALLY DANGEROUS APPLIANCE AND MUST ONLY BE USED BY TRAINED PERSONNEL IN ACCORDANCE WITH THESE INSTRUCTIONS**



- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
- DO NOT touch the blade edges.
- DO NOT attempt to cut bones or items that are frozen. This can damage the blades.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.

## Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this appliance will provide the best possible performance from your VOGUE product.

## Pack Contents

The following is included:

- VOGUE Mandolin
- Julienne Blades x 3
- Serrated Blade x 1
- Straight Blade x 1
- Protective Blade Case x 1
- Safety Grip x 1
- Instruction manual



VOGUE prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your VOGUE dealer immediately.

## Operation

### Set-up

1. Unfold the front and rear legs [Fig. 1].
2. Position the appliance on a flat, stable surface.



## Inserting the Blades



**⚠ Note: Always hold the blades by the plastic handles when handling.**

1. Slot the required Julienne blade into the appliance with the cutting edges facing UP the appliance.

**⚠ Note: Ensure that the blade slots firmly into place, with the handle protruding from the other side of the mandolin.**

2. Insert the straight or serrated blade into the mandolin with the blade edge facing UP the appliance.

**⚠ Note: The serrated blade cannot be used at the same time as the Julienne blades.**

## Adjusting the Thickness

1. Loosen the two guide plate knobs, located on either side of the mandolin.
2. Gently move the guide plate to the required position. (Push down to lower, push up from below to raise).  
The lower the plate the thicker the slice.
3. Tighten the knobs when the guide plate is in position.



**Guide Plate Knob**

## Slicing



**Note: Always use the safety grip when slicing foodstuffs.**

Cut	Blades Needed	Action	Suitable For
<b>Slice</b>	Straight edge	Slide down	Crisps, Gratin Dauphinois
<b>Crinkle</b>	Serrated edge	Slide down	Crinkle-cut, scalloped slices
<b>Waffle</b>	Serrated edge	Slide down, rotate food and grip 90° then slide down	Waffle, decorative slices
<b>Julienne</b>	Straight edge & Julienne	Slide down	Julienne, Chips/French Fries

1. Insert the food to be sliced into the safety grip, pushing it on to the spikes.
2. Holding the safety grip at the top of the mandolin, slide the foodstuff down the face of the guide plate and over the blades.
3. Return to the top of the mandolin and repeat.




**Note: Ensure the sliced food will fall from the mandolin on to a surface or into a container that is suitable for food storage/preparation.**



## Removing the Blades

1. Push down the blade release of the straight/ serrated blade and pull from the appliance.
2. Pull the handle of the Julienne blade and remove from the appliance.

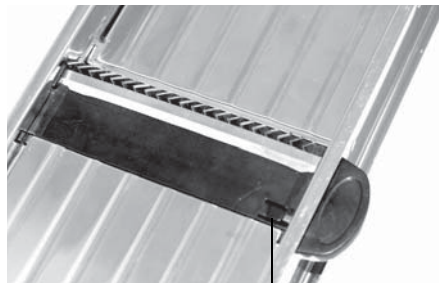

**Blade Release**

# Cleaning, Care & Maintenance

- Always use extreme care when handling the blades.
- Use soapy water and a damp cloth to clean the mandolin and blades.
- Clean the mandolin and blades regularly.
- Always dry thoroughly after washing.

# Troubleshooting

Fault	Probable Cause	Action
The blade is loose	Blade not fully inserted	Fully push the blade in to the mandolin
Blade does not cut smoothly	Blade is blunt	Replace blade
Uneven cut	Guide plate not securely fixed	Tighten guide plate knobs

# Spare Parts

Description	Spare Code
Pack of Blades (5)	<b>Y834</b>
Pusher	<b>Y835</b>

# Compliance

VOGUE parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

VOGUE products have been approved to carry the following symbol:



# NOTES



**VOGUE Telephone Helpline: 0845 146 2887**

**VOGUE, Fourth Way, Avonmouth, United Kingdom, BS11 8TB**